

Title:	How to set and use QR code authentication on KT201 access terminal	Version:	v1.0	Date:	3/2/2018
Product:	DS-K1T201 series	Page:	1 of 3		



1. Supported Models:

DS-K1T201MF-C/EF-C

2. QR code Authentication:

- Card number will be recognized by scanning the QR code.
- This function is only available for device comes with a built-in camera, also requires a v 2.0 and above firmware version.
- The version of iVMS-4200 should be v2.6.5.6 or above.


3. How to generate the card QR code?

You can generate & save the card QR code when adding the card to the person in ivms-4200 client software.

Steps:

- 1) Select an added card and click **QR Code** to generate the card QR code.
- 2) In the QR code pop-up window, click **Download** to save the QR code to the local PC.

You can print the QR code for authentication on the specified device.

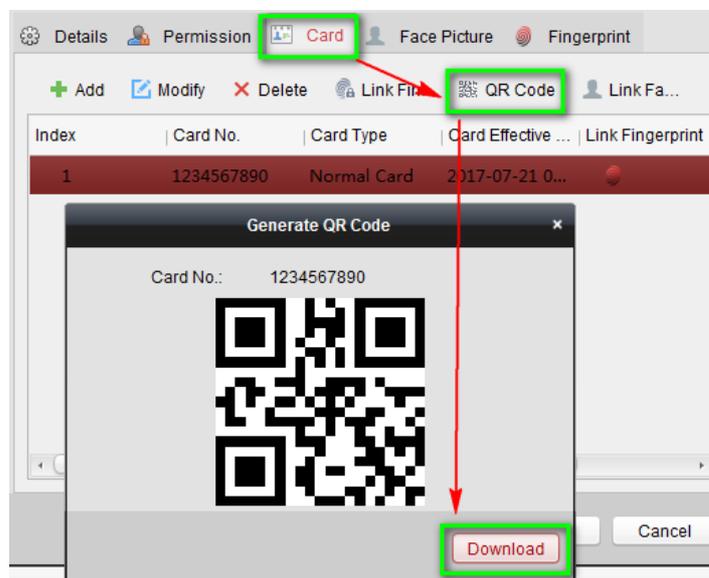

4. How to enable this function?


Go to **System Configuration -> Camera Configuration -> Enable QR Code Authentication.**

Title:	How to set and use QR code authentication on KT201 access terminal	Version:	v1.0	Date:	3/2/2018
Product:	DS-K1T201 series	Page:	2 of 3		



Note:

When enabling the function, long-press key F1 to enter the QR code authentication mode. Place the QR code picture in front of the device camera to authenticate.

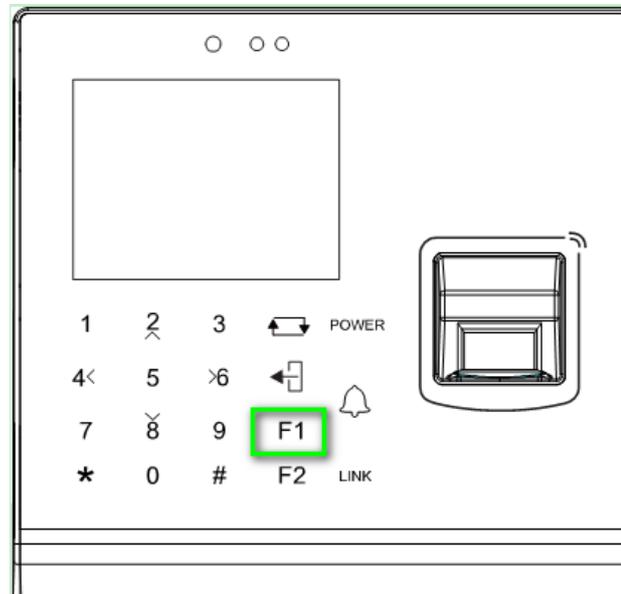

Title:	How to set and use QR code authentication on KT201 access terminal	Version:	v1.0	Date:	3/2/2018
Product:	DS-K1T201 series	Page:	3 of 3		



First Choice for Security Professionals
***HIK*VISION Technical Support**