

<b>Title:</b>	How to call two indoor stations using villa door station (FW 1.4.71)	<b>Version:</b>	v1.0	<b>Date:</b>	9/25/2017
<b>Product:</b>	Video Intercom Device	<b>Page:</b>	1 of 5		



## Preparation

1. Two indoor stations and one villa door station;
2. Client software iVMS-4200 (V2.6.2.50).

### Note:

1. All devices' firmware version should be the same (V1.4.71 it is in this document);
2. This guide only uses a simple video intercom system to demonstrate the function, which only contains indoor stations and villa door station. No master station is contained.

## Step 1: Add Devices to iVMS-4200


- 1) Go to **Device Management-> Add to Client** to add all devices (two indoor stations and one villa door station) to iVMS-4200.;
- 2) Make sure all device IP addresses are in the same local network. Click **Modify Netinfo** to modify if they are not.

IP	Device Type	Firmware Version	Security	Server Port	Device Serial ...	Start Time	Added
10.5.8.150	DS-KH8300-T	V1.4.71build 170515	Active	8000	DS-KH8300-T...	2017-09-20 14:43:31	No
10.5.8.152	DS-KH6310-W	V1.4.71build 170515	Active	8000	DS-KH6310-W...	2017-09-20 14:49:53	No
10.5.8.160	DS-KD8102-V	V1.4.71build 170515	Active	8000	DS-KD8102-V...	2017-09-20 14:42:39	No
10.5.8.161	DS-KD8002-VM	V1.4.71build 170515	Active	8000	DS-KD8002-V...	2017-09-20 14:44:08	No
10.5.8.172	DS-KV8202-IM	V1.4.71build 170515	Active	8000	DS-KV8202-I...	2017-09-20 14:43:56	No


## Step 2: Set Villa Door Station

- 1) Go to **Intercom->ID Configuration** to select the **Device Type** as **Door Station(V Serie)**;
- 2) Set a **No.** (ranges from 0~6). 0 represents main station while 1~6 represents extension station;
- 3) Click **Save** to finish;

<b>Title:</b>	How to call two indoor stations using villa door station (FW 1.4.71)	<b>Version:</b>	v1.0	<b>Date:</b>	9/25/2017
<b>Product:</b>	Video Intercom Device	<b>Page:</b>	2 of 5		

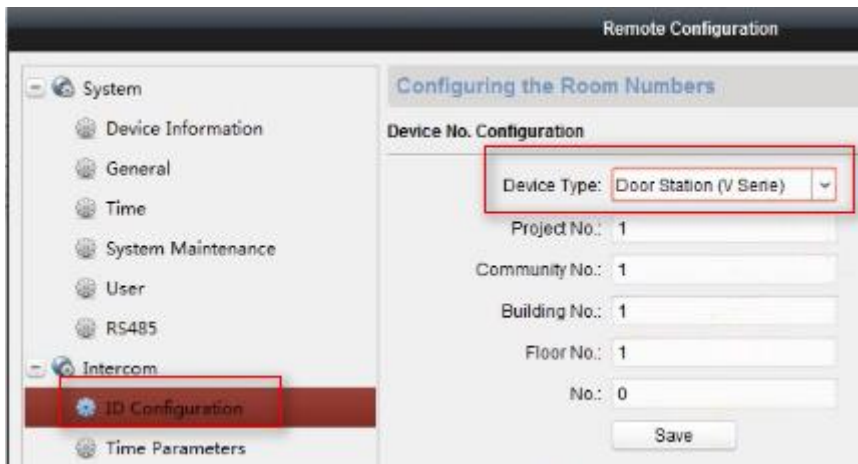

- 4) Go to **Intercom->Dial** to link the button on villa door station to indoor stations. For example, 1-0-1 means that button 1 could call room 1, 2-0-2 means that button 2 could call room 2;
- 5) Click **Save** to finish;

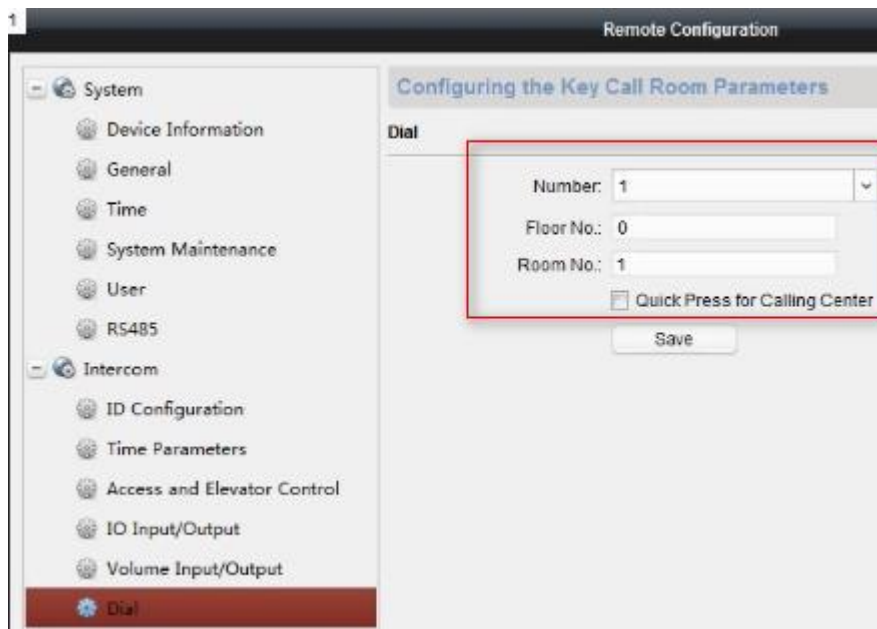


### Step 3: Set Main Indoor Station 1

- 1) Select one indoor station, click **Remote Configuration**;



- 2) Go to **Intercom-> ID Configuration**, select **Device Type** as **Indoor Station**;
- 3) Set a room number (ranges from 1-9999) for it;
- 4) Click **Save** to finish;

<b>Title:</b>	How to call two indoor stations using villa door station (FW 1.4.71)	<b>Version:</b>	v1.0	<b>Date:</b>	9/25/2017
<b>Product:</b>	Video Intercom Device	<b>Page:</b>	3 of 5		

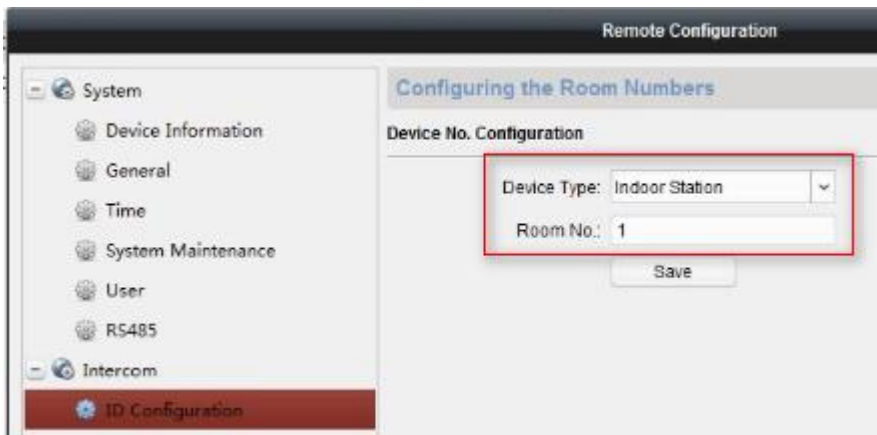


- 5) Go to **Network -> Linked Network Configuration**, input **(Main) Door Station IP Address** as the villa door station's IP address;
- 6) Choose **Main Door Station type** as **Main Door Station(V Series)**;
- 7) Click **Save** to finish;



#### Step 4: Set Main Indoor Station 2

Repeat Step 3 to set main indoor station 2. Only to change the **Room No.** here to 2.

<b>Title:</b>	How to call two indoor stations using villa door station (FW 1.4.71)	<b>Version:</b>	v1.0	<b>Date:</b>	9/25/2017
<b>Product:</b>	Video Intercom Device	<b>Page:</b>	4 of 5		

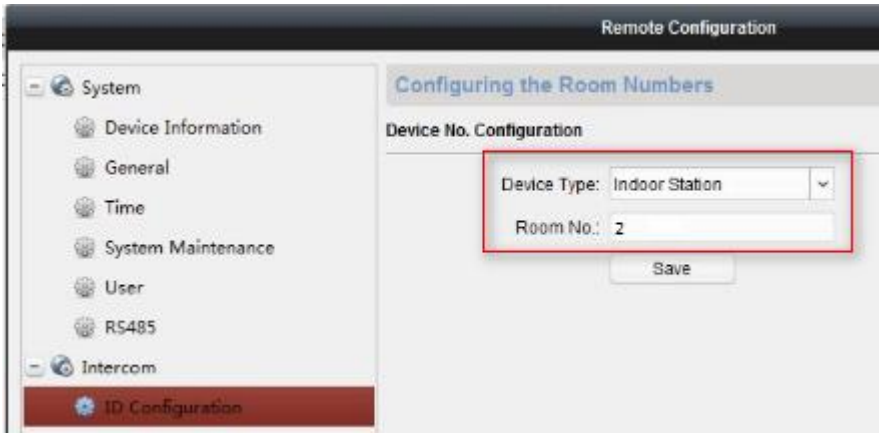

### Step 5: Make a Call Using Villa Door Station

Press the button 1 to call room 1; Press the button 2 to call room 2.



<b>Title:</b>	How to call two indoor stations using villa door station (FW 1.4.71)	<b>Version:</b>	v1.0	<b>Date:</b>	9/25/2017
<b>Product:</b>	Video Intercom Device	<b>Page:</b>	5 of 5		



**First Choice for Security Professionals**  
***HIK*VISION Technical Support**